



ASSEMBLY AND MAINTENANCE OF A CENTRIFUGAL MULTI-STAGE PUMP



DL PSM03

This mounting kit allows the assembly and maintenance of a typical multi-stage centrifugal pump commonly used in industry and water transport.

Thanks to the cutting, the students can learn all the components of the pump and its operation.

The material is supplied stored and protected in a transport box together with the tools necessary for its use.

The user manual, supplied with the equipment, shows clearly and with many images, the entire process to follow for operating the equipment.

TRAINING OBJECTIVES

The practice's manual contains the necessary instructions for assembly and disassembly of the device, as well as necessary guidelines for carrying out its maintenance and repair.

CHARACTERISTICS

Service data

- Relative humidity of the air, continuous service as max. 55%,
- Ambient temperature: -20°C to 40°C,
- Maximum height above sea level: 1000m.

Fabrication code

- **SK-20 03-LL-13-11-000** with:
 - ◆ SK: Pump type,
 - ◆ 20: Pump size,
 - ◆ 03: Phases,
 - ◆ LL: Axis support,
 - ◆ 13: Mechanical Seal,
 - ◆ 11: Material.